

SIEMENS

Switch-/Dimming actuator

Schalt-/Dimmaktor

Actionneur de commutation / Variation

Actuador de conmutación/regulación

Attuatore commutazione/dimmerizzazione

Atuador de regulação da intensidade da luz

Dimmer Aktivator

Модуль переключения и диммирования

Schakel-/dim actor

开关 - / 调光执行器



5WG1526-4DB23



Operating Instructions Betriebsanleitung
Instruções de Serviço İşletme kılavuzu

Notice d'utilisation
Руководство по эксплуатации

 
 

Instructivo
Bedieningshandleiding

Istruzioni operative
使用说明



Contents / Lieferumfang / Etendue de la livraison /
Contenido / 供货范围

Required tools / Notwendige Werkzeuge /
Outils nécessaires / Herramientas requeridas / 必要工具

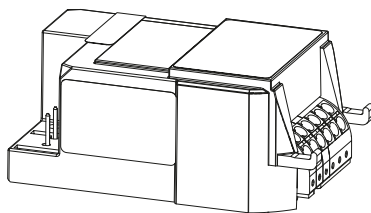

Assembly / Montage / Montaje / 安装




5WG1118-4AB01



Technical Documentation:

http://www.hqs.sbt.siemens.com/cps_product_data/data/search_find_en.htm?te1=5WG1&te2=118-4AB01

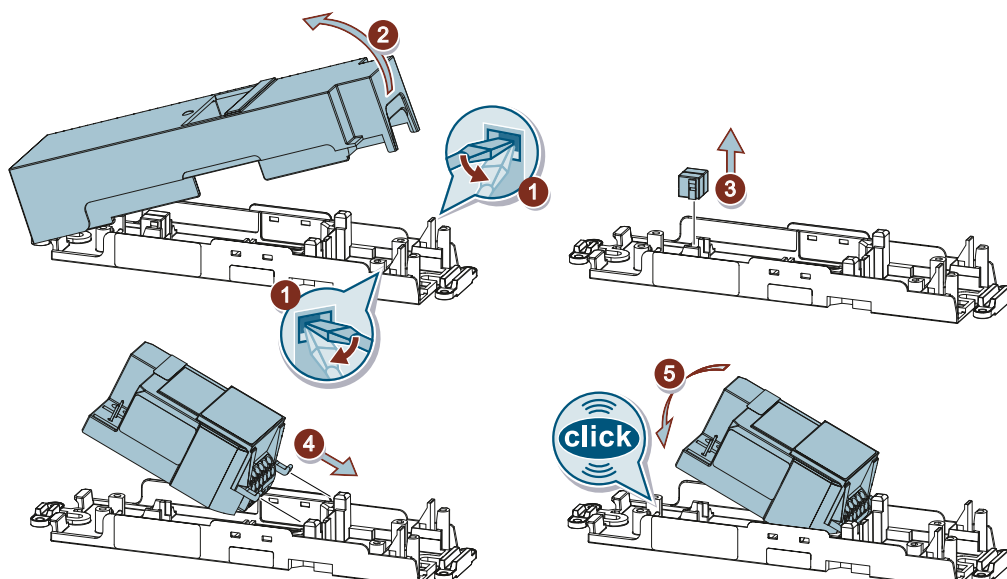


A5W00053727A_RS-AB



Removal / Demontage / Démontage / Desmontaje / 拆卸



5WG1118-4AB01

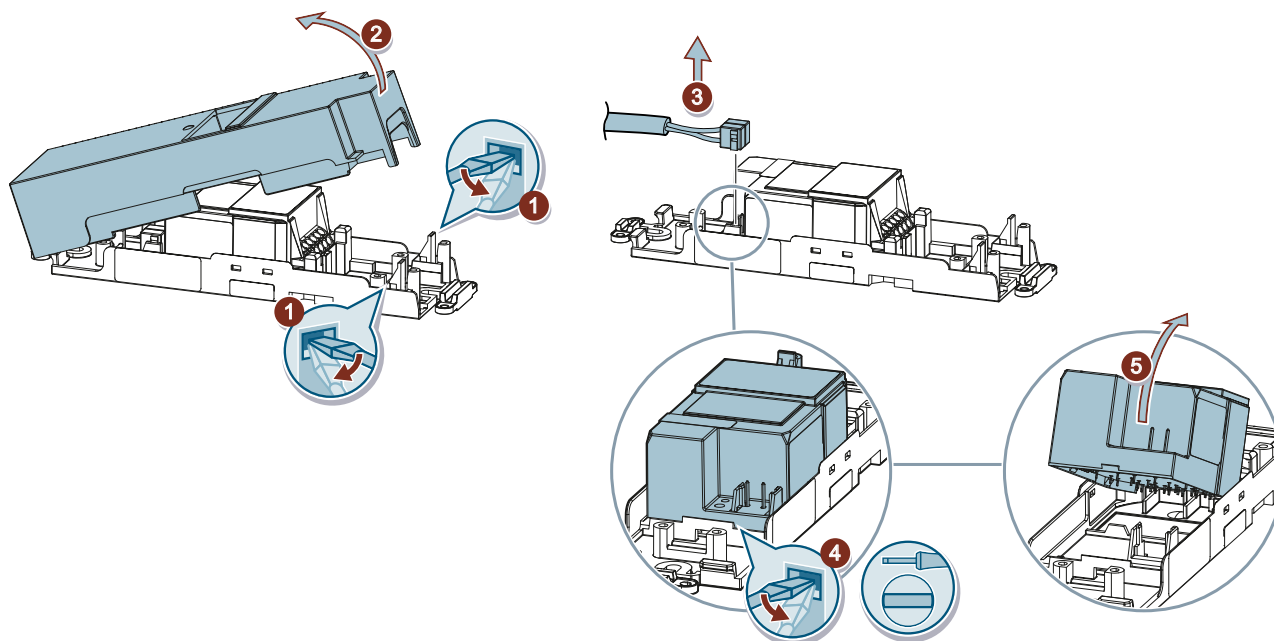

Assembly / Montage / Montage / Montaje / 安装

Removal / Demontage / Démontage / Desmontaje / 拆卸



5WG1641-3AB01



Technical Documentation:

https://www.hqs.sbt.siemens.com/cps_product_data/data/search_find_de.htm?te1=5WG1&te2=6413AB01

5WG1590-8AB01




Technical Documentation:

https://www.hqs.sbt.siemens.com/cps_product_data/data/search_find_en.htm?te1=5WG1&te2=5908AB01



Connection / Anschluss / Raccordement / Conexión / 连接

Disconnection / Trennung / Dèconnexion / Desconexión / 断开

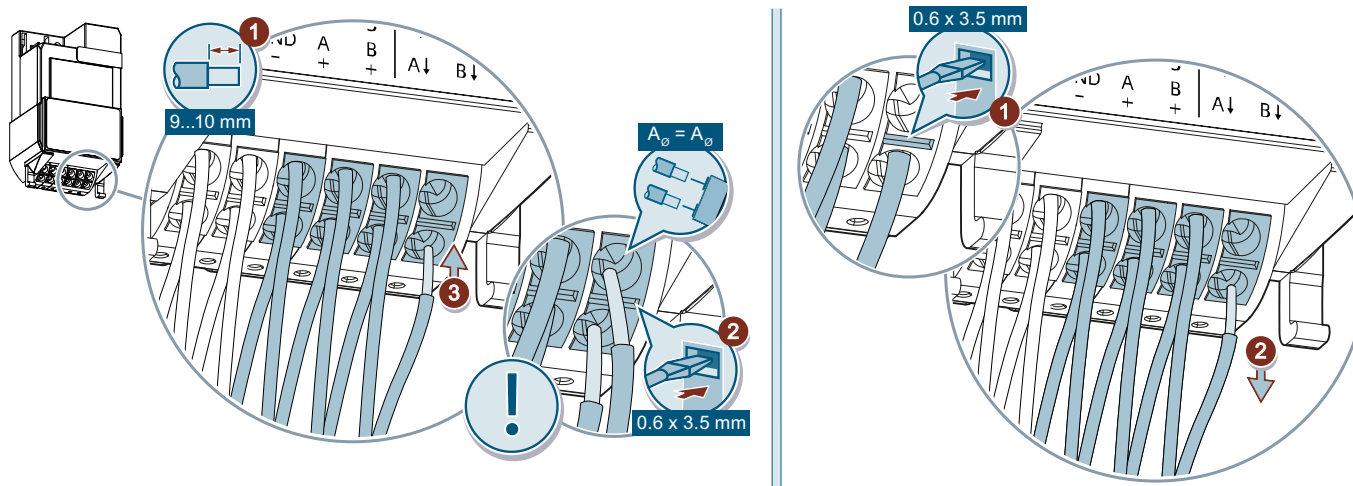





Connection / Anschluss / Raccordement /
Conexión / 连接


Disconnection / Trennung / Déconnexion /
Desconexión / 断开





Cu	
	0.5 ... 2.5 mm ²
	2.5 mm ²

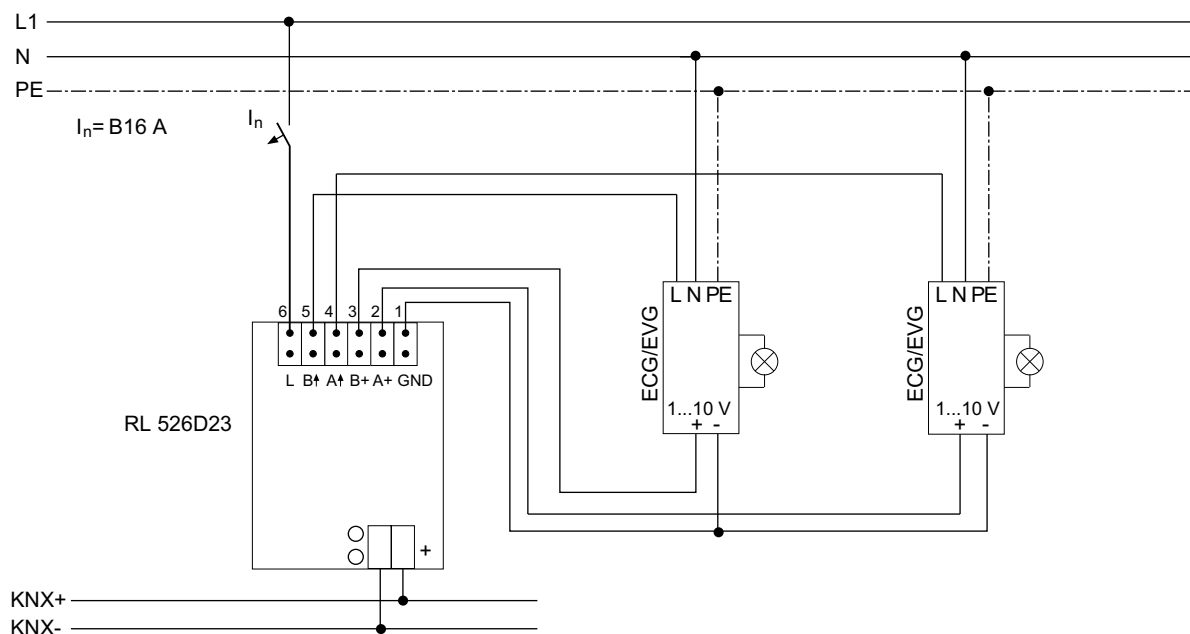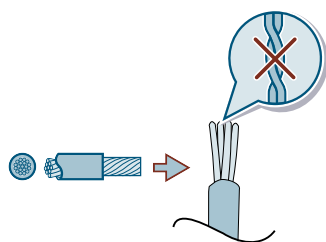

5WG1118-4AB01

 

Cu	
	0.6 ... 0.8 mm

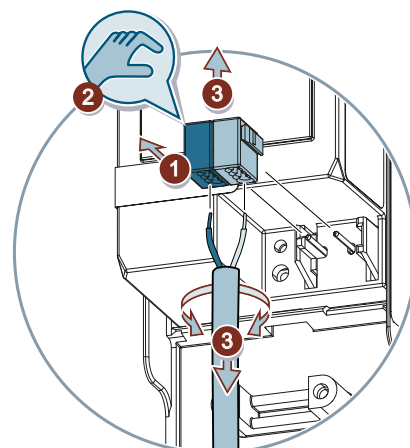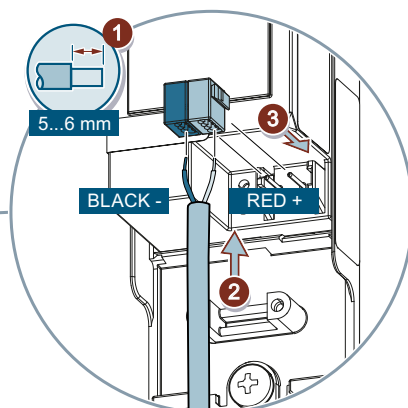


A5W00053727A_RS-AB




Test / Test / Test / Test / 测试



KNX 24 V DC typ. SELV

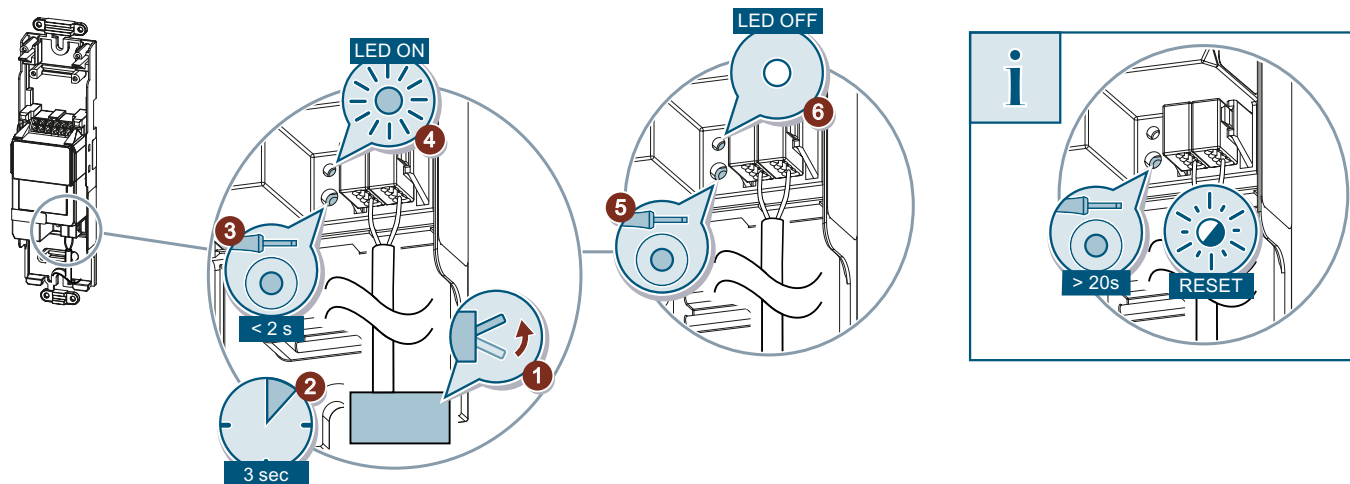

Information / Information / Informations / Información / 信息

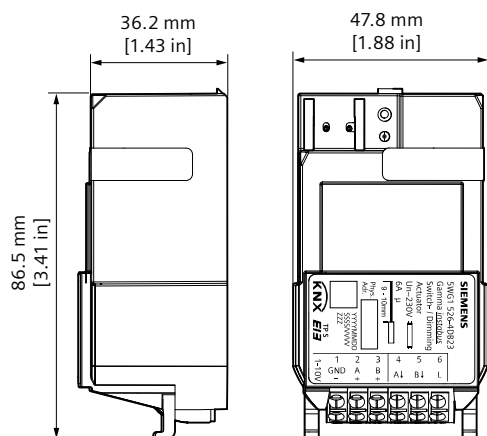

Technical Documentation:
<http://www.siemens.com/gamma-td>



Technical Support
<http://www.siemens.com/supportrequest>



FAQ:
<https://support.industry.siemens.com/cs/ww/en/ps/faq>

