

Linien- / Bereichskoppler
N 140/13

5WG1140-1AB13

Stand: April 2020

Produkt- und Funktionsbeschreibung

Der Linienkoppler verbindet datenmäßig zwei getrennte *EIB*-Buslinien miteinander, trennt sie jedoch galvanisch voneinander. Dadurch kann jede Buslinie im lokalen Betrieb unabhängig von den anderen Linien betrieben werden.

Das Gerät ist einsetzbar als Linienkoppler, Bereichskoppler oder Repeater. Beim Einsatz als Linien- / Bereichskoppler sollte eine Filtertabelle geladen werden, mit deren Hilfe bestimmte Bustelegramme von einer der beiden Linien entweder gesperrt oder auf die andere Linie durchgeschleust werden, um so die Busbelastung zu verringern. Die Filtertabelle wird von der ETS bei Parametrierung und Inbetriebnahme der Anlage automatisch erstellt. Linienkoppler, Bereichskoppler und Repeater unterscheiden sich hardwaremäßig nicht und besitzen deshalb auch dieselbe Bestellnummer. Bei der Vergabe der physikalischen Adresse mit Hilfe der ETS wird die Funktion des Kopplers automatisch festgelegt. Hierbei gelten folgende begriffliche Zuordnungen:

Koppler-Funktion	Primärline	Sekundärline
Bereichskoppler	Bereichslinie	Hauptlinie 1-15
Linienkoppler	Hauptlinie 1-15	Linie 1-15
Repeater	Linie Teil n (n=1-3)	Linie Teil n+1

Weitere Informationen

<http://www.siemens.de/gamma>

Anschlussbeispiel

siehe Bild 1

Technische Daten

Bemessungsspannung

- Primärline: DC 24V (DC 21...30V), dient zur Geräteversorgung
- Sekundärline: DC 24V (DC 21...30V)

Anschlüsse

- Primärline: Busklemme, schraubenlos 0,6...0,8mm Ø eindrähtig; Leiter ca. 5 mm abisolieren und in die Busklemme stecken (rot = +, schwarz = -).
- Sekundärline: Busklemme, schraubenlos (wie oben)

Mechanische Daten

- Abmessungen: Reiheinbaugerät im N-Maß, Breite 2 TE (1TE = 18mm)
- Gewicht: ca. 85 g

Elektrische Sicherheit

- Schutzart (nach EN 60529): IP 20

Umweltbedingungen

- Umgebungstemperatur im Betrieb: - 5 ... + 45 °C
- Lagertemperatur: - 25 ... + 70 °C
- rel. Feuchte (nicht kondensierend): 5 % bis 93 %

Lage- und Funktion der Anzeige- und Bedienelemente

siehe Bild 2:

- A1 LED grün: Betriebsbereit
- A2 LED gelb: Datenempfang auf der untergeordneten Buslinie (Sekundärline)
- A3 LED gelb: Datenempfang auf der übergeordneten Buslinie (Primärline)
- A4 LED rot: zur Anzeige Normalmodus (LED=Aus) oder Adressiermodus (LED=Ein); sie erlischt automatisch nach Übernahme der physikalischen Adresse
- A5 Lerntaste zum Umschalten zwischen Normalmodus und Adressiermodus zur Übernahme der phys. Adresse
- A6 Busklemme für Sekundärline (z. B. Linie)
- A7 Busklemme für Primärline (z.B. Hauptlinie)

Montage und Verdrahtung

Das Gerät kann für feste Installation in Innenräumen, für trockene Räume, zum Einbau in Starkstromverteiler oder Kleingeschäften auf Hutschienen EN 60715-TH35-7,5 verwendet werden.

Montage und Demontage des Gerätes: siehe Bild 3.

Busleitung anschließen und abklemmen: siehe Bild 4.

! WARUNG

- Das Gerät darf nur von einer zugelassenen Elektrofachkraft installiert und in Betrieb genommen werden.
- Das Gerät darf nicht geöffnet werden.
- Bei der Planung und Errichtung von elektrischen Anlagen sind die einschlägigen Richtlinien, Vorschriften und Bestimmungen des jeweiligen Landes zu beachten.

Allgemeiner Hinweis

- Ein defektes Gerät ist an die zuständige Geschäftsstelle der Siemens AG zu senden.

Line-/ Backbone Coupler 5WG1140-1AB13
N 140/13

Issued: April 2020

Product and Applications Description

The line-/ backbone coupler provides a data connection between two separate KNX bus lines and isolates the bus lines from each other in order to limit bus line interference.

The device can be used as line coupler, backbone coupler or repeater. If it is used as a line- or backbone coupler the filter table should be down-loaded with the help of which bus telegrams are either blocked off from one of the two lines or are passed on to the other line thus reducing the bus load. The filter table is created by the ETS automatically on commissioning the system. As there are no differences in hardware between the line coupler, the backbone coupler and the repeater they were given the same ordering number. After downloading the physical address, the function of the coupler is assigned automatically. Depending on the function of the coupler the following wording is used:

Coupler function	Primary line	Secondary line
Backbone coupler	Backbone line	Main line 1-15
Line coupler	Main line 1-15	Line 1-15
Repeater	Line Part n (n=1-3)	Line Part n+1

Additional Information

<http://www.siemens.com/gamma>

Example of Operation

see Figure 1

Technical Specifications

Rated voltage

- primary line: DC 24V (DC 21...30V), used for power supply of the device
- secondary line: DC 24V (DC 21...30V)

Connections

- primary line: screwless bus connection block 0,6...0,8mm Ø single core; remove approx. 5 mm of insulation from the conductor and plug it into the bus connection block (red = +, black = -).
- secondary line: screwless bus connection block (see above)

Physical specifications

- dimensions: N-system DIN-rail mounted device, width: 2 WUs (1WU = 18 mm)
- weight: approx. 85 g

Electrical safety

- protection (according to EN 60529): IP 20

Environmental specifications

- ambient temperature operating: - 5 ... + 45 °C
- storage temperature: - 25 ... + 70 °C
- relative humidity (non-condensing): 5 % to 93 %

Location / Function of the Display and Operating Elements

see Figure 2:

- A1 Green LED for 'ready'
- A2 Yellow LED for data reception on the secondary bus line
- A3 Yellow LED for data reception on the primary bus line
- A4 Red LED for indicating normal operating mode (LED off) or addressing mode (LED on); upon receiving the physical address the device automatically returns from addressing mode to normal operating mode
- A5 Learning button for switching between normal operating mode and addressing mode for assigning the physical address
- A6 Bus connection block for secondary line (e.g. line)
- A7 Bus connection block for primary line (e.g. main line)

Mounting and Wiring

The device may be used for permanent interior installations in dry locations within distribution boards or small casings with DIN rail EN 60715-TH35-7,5.

Mounting / dismounting the device: see Figure 3.

Connecting / disconnecting the bus cable: see Figure 4.

! WARNING

- The device must be mounted and commissioned by an authorised electrician.
- The device must not be opened.
- For planning and construction of electric installations, the relevant guidelines, regulations and standards of the respective country are to be considered.

General Note

- Any faulty device should be returned to the local Siemens office.

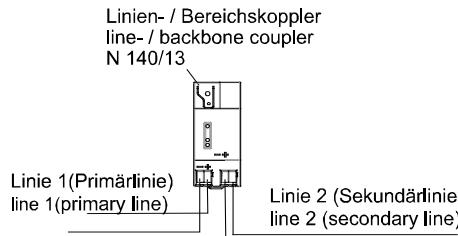


Bild / Figure 1

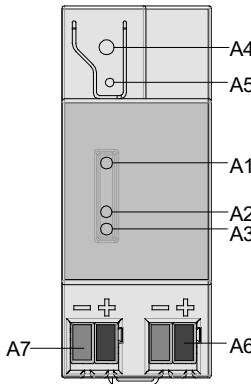


Bild / Figure 2

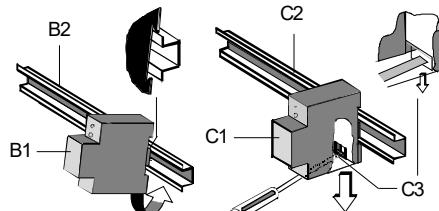


Bild / Figure 3

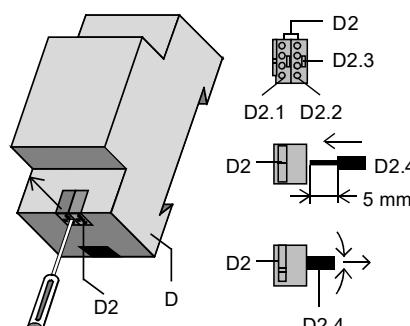


Bild / Figure 4

Technical Support

- Bei zusätzlichen Fragen zum Produkt wenden Sie sich bitte an unseren Technical Support:
- If you have further questions concerning the product please contact our technical support:

+49 (911) 895-2222
support.automation@siemens.com
www.siemens.de/automation/support-request

Electromagnetic compatibility**USA:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Changes or modifications not expressly approved by Siemens Schweiz AG could void the user's authority to operate the equipment.

United States representative:

<https://new.siemens.com/us/en/products/buildingtechnologies/home.html>

Canada:

CAN ICES-3(B)/NMB-3(B)